



Q-clip Assembly Guide

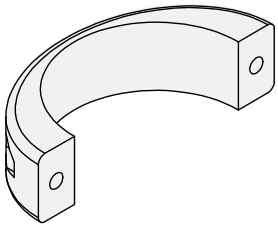

(1) Q-clip Back Piece

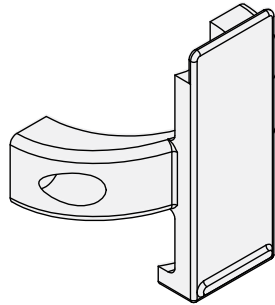


(1) Q-clip Front Piece



(2) 4mm x 0.7mm Cap Nuts




(2) 4mm x 0.7mm x 18mm
Socket Cap Screws

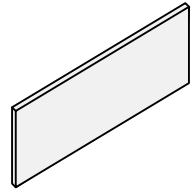


(1) Silicone strip


Instructions

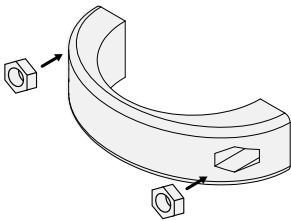


1 - Insert the Cap nuts into the recesses on the outside of the Q-clip back piece.

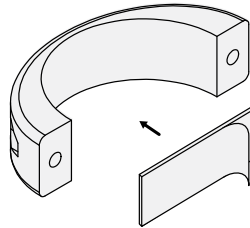


2 - Remove the red lining from the silicone strip and adhere to the inside of the back piece.

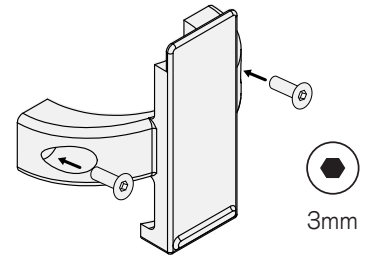


3 - Insert the socket cap screws into the front of the Q-clip front piece, start the threads. These fixings use a 3mm hex drive.

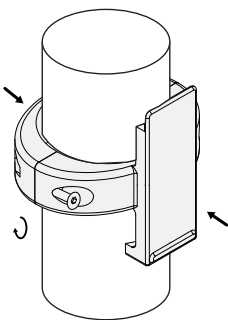

4 - Align the front and back pieces around the leg where you want your Q-clip to be. Turn the screws in tightly until the clip is tight around the leg.

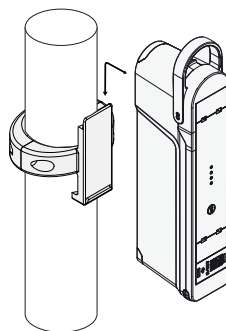

5 - Slot the Q-pac onto the Q-clip and drop into place.

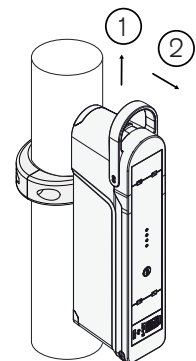

6 - When removing the Q-pac, first lift the Q-pac up, and then pull away from the Q-clip.